

# TV USER MANUAL

## Warning

- Please read the user manual carefully before opening the package of this unit, and should comply with all practice manuals and warnings.
- For the risk of high voltage, do not repair it by final user. All servicing and adjustments should ask for the qualified service person.
- The adapter must comply with the category of tags and the special power. The using method please refer to the power user manual.
- The unit should be used with the corresponding power ,silk-screen on the back of the unit.
- Do not place the unit near sofa or window or explore to sunshine or wet place, and avoid dropping or striking.
- Pick off the jack from the power jack then clean it. Do not use the thinner or other chemical detergents. Use soft cloth to wipe.
- Do not use for a long time or use it in thunder rainy weather, please pick off the power jack from socket.

Notes: (remote controller panel)

1. Aim the remote controller at the infrared receiver on The control panel when in use.
2. Avoid pressing, dropping, moistening or disassembling of the remote controller.
3. Avoid pressing buttons continuously and quickly. Interval between two operations must be at least 2 seconds.

## Exterior Description

A rectangular button with rounded corners, colored light blue, with the word "POWER" in red capital letters.

Press this button to switch off the electricity, press again to switch on. If the television is not used for long time, please turn off electricity power.

A rectangular button with rounded corners, colored light blue, with the text "TV/AV" above "MP3/MP4" in white capital letters.

Press this button to switch the playing states of the television.

A rectangular button with rounded corners, colored light blue, with "CH+" in white capital letters.A rectangular button with rounded corners, colored light blue, with "CH-" in white capital letters.

/ (channel selection buttons): Press CH+ button to increase the channel number; Press CH- button to decrease the channel number.

A rectangular button with rounded corners, colored light blue, with an upward-pointing arrow above "VOL+" in white capital letters.A rectangular button with rounded corners, colored light blue, with a downward-pointing arrow above "VOL-" in white capital letters.

/ (volume adjustment buttons): Press the VOL- button to

decrease the television audio volume; Press VOL+ button to increase the television audio volume.

### MENU

Press this button to enter or exit the menu.



- **POWER:** Press the button to turn off the television display; Press it again to power on. Please turn the main power switch off when the television is not to use for a long period.
- **Numeric buttons (0-9) and -/-- (channel button):** there are 255 channels for selection. There are 11 buttons on the remote controller: 0-9 buttons and -/-- button. When the channel numbers is 1-digit, the corresponding numeric button should be pressed to select. When the channel number is 2-digit press -/-- to toggle -/--sign on the screen first, then press corresponding numeric buttons. When the channel number is 3-digit, the screen displays---, the press the corresponding numeric button.
- **S.Show:**back to previous screen
- **ZOOM:** Press the button to choose as follows: zoom 1 zoom 2 zoom 3 zoom4, zoom1/2 zoom1/3 zoom1/4 zoom:[off] for processing to zoom picture s play.
- **REPEAT:** Press the button to circle state as follows: repeat:[single] repeat:[file],repeat:[all] repeat:[off] for putting up play.

 
## Menu basic adjustment

### Menu show on TV state.


1. Press MENU button to display menu,continue press MENU will display next menu(there are four menus,they are picture,system,clock and preset), the screen display as following:

PICTURE	
BRIGHT	50
CONTRAST	50
COLOR	50
SHARP	50


- press CH+ or CH- to choose the items
- Press VOL+ or VOL- to adjust the corresponding items
- Press MENU button to confirm and exit menu

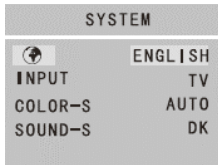

 - press CH+ or CH- to choose the items
- Press VOL+ or VOL- to adjust the corresponding items
- Press MENU button to confirm and exit menu

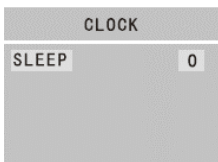

 
- press CH+ or CH- to choose the items
- Press VOL+ or VOL- to adjust the corresponding items
- Press MENU button to confirm and exit menu

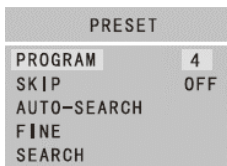


- press CH+ or CH- to choose the items
- Press VOL+ or VOL- to adjust the corresponding items
- Press MENU button to confirm and exit menu

- 1.The LCD support 9 menu languages display: includingChinese, English, Russian,German, French, Dutch, Spanish, Portuguese and Italian.
- 2.SLEEP Select CLOCK can set the off time for the television.
- 3.When the picture are not clear or no color, select FINE to adjust.
- 4.If SKIP is on in a certain channel, the channel will skip over when pressing CH+ or CH-. When recovering the channel, press -/-- to input corresponding number. Then enter PRESET to select SKIP to make it in the OFF state.

## MULTIMEDIA state display screen

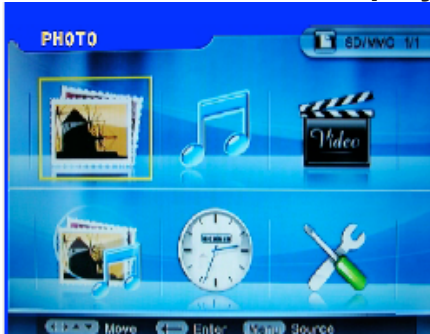 


- A. Press  to choose photo music video slide show clock/date setup the items ;
- B. Press POWER/ENTER button to make sure;
- C. Press MENU/RETURN button to exit.

## SETUP basic adjustments

 
- A. Press SETUP button to enter menu under the first screen.
- B. Press CH+,CH- to choose each item in the spread menu fluctuate.
- C. Press ENTER button to affirm after selecting to adjust item.
- D. Press >, < to adjust item .
- E. Press RETURN button to exit.

1).Press SETUP button screen play as follows:

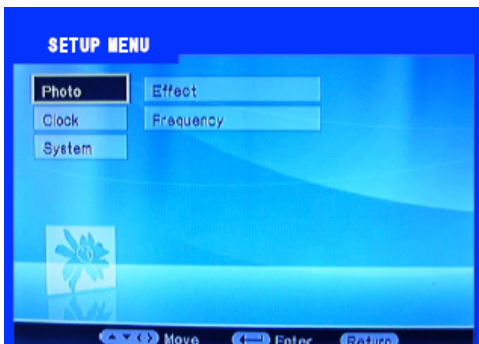

2).SETUP under submenu:

 PHOTO items display:

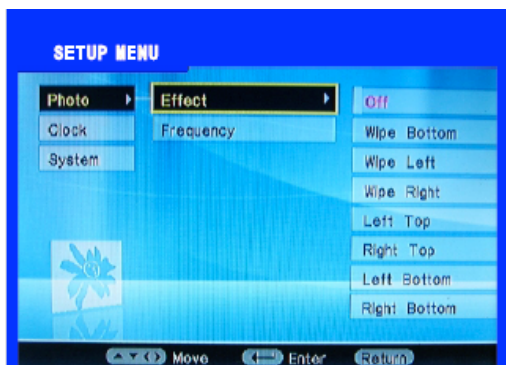


CLOCK items display:



 SYSTEM items display:



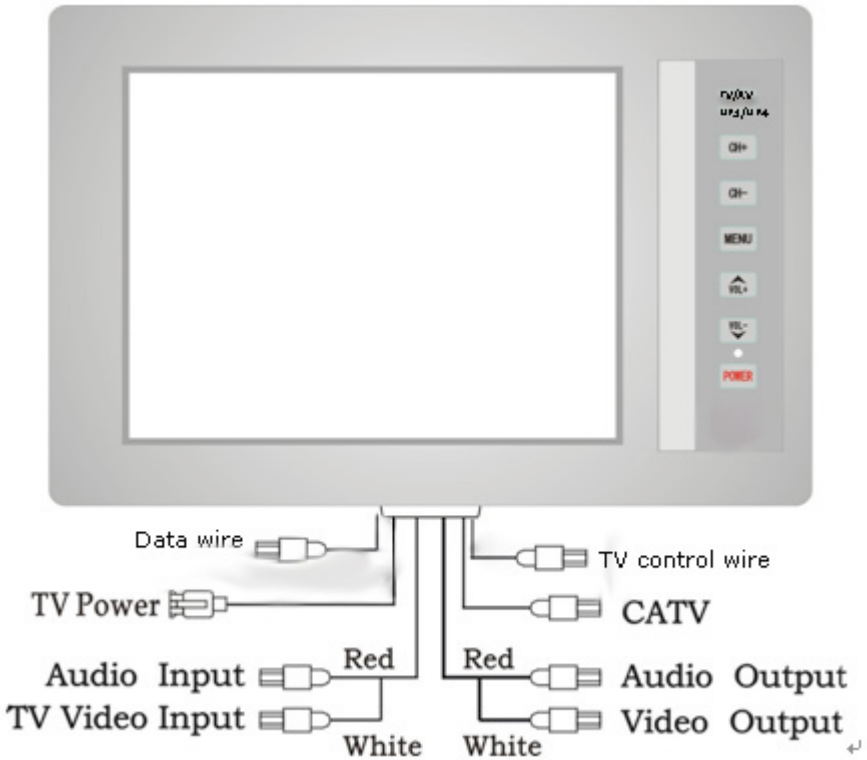

**POWER** Power switch **TV/AV MP3/MP4** TV/AV MP3/MP4 **MENU** Menu

**VOL+** Volume reducing + simulation adjustment

**VOL-** Volume increasing + simulation adjustment

**CH+** Channel reducing + function selection

**CH-** Channel increasing + function selection